


HP11

SL 4.0

Single-level thermostat

Handbook

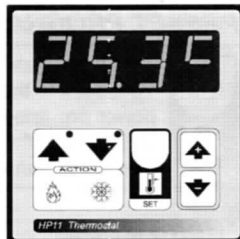

MAIN SETTINGS (Run Mode).



TEMPERATURE SETTING.

Press **SET** (key lamp flashes):

This message will be displayed in alternance with the °Set 1 temperature value.

Press + or - to modify. Press **SET** to confirm.

t.SET

25.05

Example t.SET = 25.0°

VIEWING TEMPERATURE RECORDING



After pressing + will be displayed followed by °Maximum Temperature Recording.

After pressing - will be displayed followed by °Minimum Temperature Recording.

Recorder values are stored in a permanent memory. To clean memory keep pushed + keys for more than 3 seconds. Before cleaning the **CLEA** message will be displayed.

COST PROGRAMMING (System constants)



These settings refer to the mode operation of the system and must be made on initial start-up: press -/+ together for at least one second: the message **C.O.S.t.** will be displayed.

Press then repeatedly **SET** until interested variable's message is displayed (see table below): variable value and related message will be displayed.



Press + or - to set a new value and then **SET** to confirm.

The next system constant will then appear.

You can press **SET** for a least two second to escape and return to the *Run Mode*

Mess.	Value	Meaning	Note
diFF	0.2°	° differential	*1
tEnP	=1	Temperature representation (=1 °C, =2 °F)	*2
Ad.tE	0°	° Input temperature sensor correction (+ or -)	*3
rY.OC	=1	Relay status if sensor Open Circuit (O.C)	*4
rY.SC	=0	Relay status if sensor Short Circuit (S.C)	*4

*1) For more details see *Operating Diagrams*.

*2) tEnP=1 : °C Temperature range.

tEnP=2 : °F Temperature range.

*3) Sensor reading can be adjusted by pressing the + or - keys

*4)=0 Relay De-Energised, =1 Relay Energised.

PRESET PROGRAMS



This processor comes already with a preset variable settings.

To reset it to these settings, switch processor off then press **SET** key and keep it pressed giving power on: release **SET** key when on the screen appear **boot** message.

t.Set= 25.0°

The **COST** values are shown in **COST** paragraphs.

"HAND MODE"



In some start-up conditions may be useful to work in "hand" mode.

Switch the processor off, press + key and keep it pressed giving power on:


HAnd message will be displayed (release now + key).

Press + (1 is displayed) and push **SET** to activate relay.


You can press **SET** for a least two seconds to escape and return to the *Run Mode*.

STATE INDICATION LAMPS

The lights situated at the bottom of the display show the state of the relay

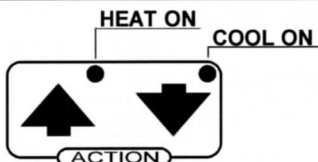

OPERATING DIAGRAM

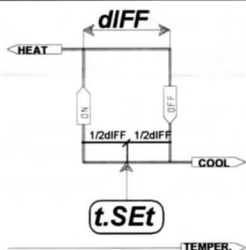

INSTALLATION

How to connect the line

Connect 230V line on terminals L-N.

Protect supply with adequate fuse.


How to connect the contacts

Connect terminals on the terminal block (contacts up to 4AMP.AC1) to the loads as shown in the diagram.

How to connect the sensors

Connect the sensors provided as shown in the diagram.

For remote connections use a standard 0.5-square millimetre two-pole wire for each sensor, taking great care over the connections, by insulating and sealing the joins carefully. **-O.C.-** is displayed when the temperature sensor wiring is open, **-S.C.-** is displayed when the temperature sensor wiring is short circuit (exiting condition of relay in this case is that setted in **Cost**, **rY.OC** - **rY-SC**).

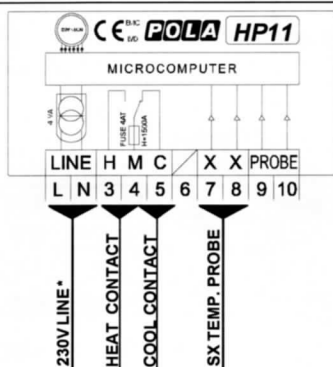

* Other power voltage if you required

As it company policy to continually improve the products the Manufacturers reserve the right to make any modifications thereto without prior notice. They cannot be held liable for any damage due to malfunction.

POLA

CE



21.03.07